


Bustin Gladiator Ramp Preventative Maintenance & Usage Guidelines

This Preventative Maintenance and Usage guideline is to inform users that regular inspection of your ramp must be completed every three months and it's advisable that drivers inspect the ramp daily before use. Using a damaged ramp could result in bodily injury. Use only R•O•M replacement parts for repairs call 800-827-3692.

Grating (1) should be fully intact, with no cracks or broken welds. If there is any damage to the grating or welds, they have been compromised and the ramp should be replaced.

Inspect the transition plate (2), wear bands (3), and apron (4) for wear or cracks. Cracks or excessive wear can lead to failure or injury. Any components exhibiting these characteristics should be replaced immediately.

Warning labels should be visible and legible. If not legible be sure to replace as soon as possible: #label028 (5).

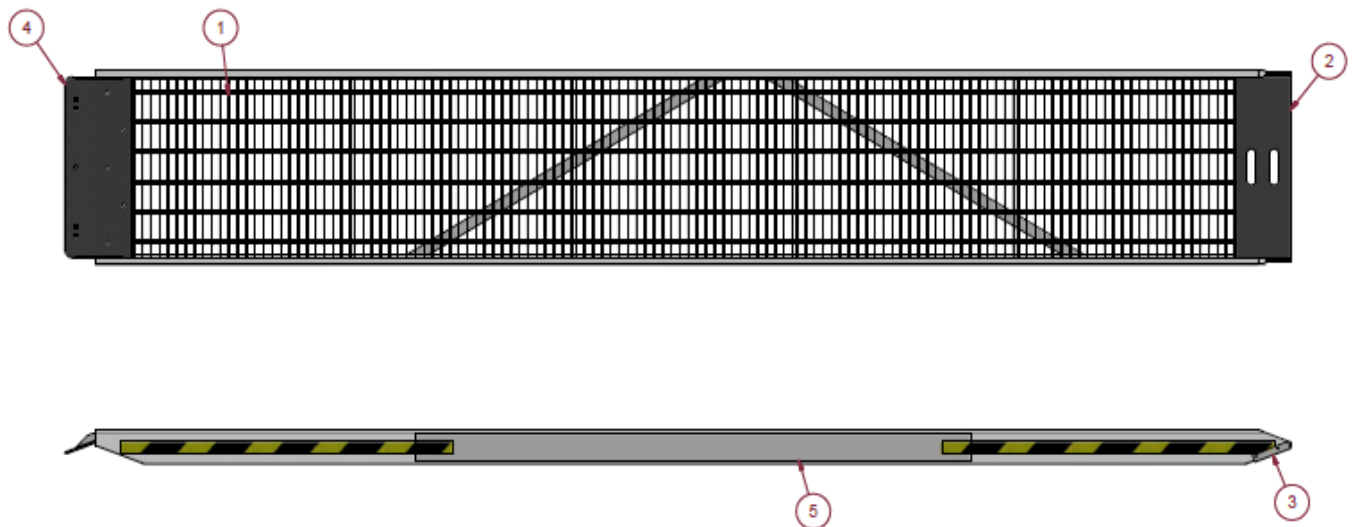

IMPORTANT: R•O•M also recommends that the ramp be used on a level surface. Be sure to regularly inspect your ramp for loose fasteners, and repair or replace damaged parts. Any parts that are damaged or loose can cause serious injury. Improper usage of the ramp can cause damage and possibly void any remaining warranty. Please contact your Customer Development Representative at 800-827-3692.