

R•O•M ROADWARRIOR™ LP Ramp Preventative Maintenance & Usage Guidelines


Periodic inspection of your ramps must be completed every three months. Driver inspection is recommended daily before use. Operating a damaged ramp could result in personal injury. Use only R•O•M replacement parts for repairs call 800-827-3692.

Castings (3) should be fully intact without any cracks or missing webs. This ramp has a reversible feature to provide a new walk surface once casting nodules become worn down.

Inspect all 5/16" screws (12) along ramp side rails (2) to insure they are tight (19.5 ±1 ft.-lbs. torque) **DO NOT OVER TIGHTEN SCREWS!** If two adjacent screw heads are missing, or more than two on one side are missing, replace broken screws and associated tie bar (1) Please reference FM-8.5-129 Tie-Rod Replacement Instructions located on www.romcorp.com for full details.

Inspect transition plate (4), wear bands (13), for unusual wear or cracks. Cracks and/or excessive **wear may indicate fatigue. Any components exhibiting these characteristics should be replaced** immediately.

All labels shown below must be legible. If not legible, be sure to replace as soon as possible: Label Warning Ramp Safety Check LP (5), Label Do Not Drop Ramp LP (6), Label Roadwarrior LP (7), Label Caution Watch Step LP (8), Tape Reflective Red (9), Label LP Ramp Caution (10), Label Caution Do Not Reach Under LP (11).

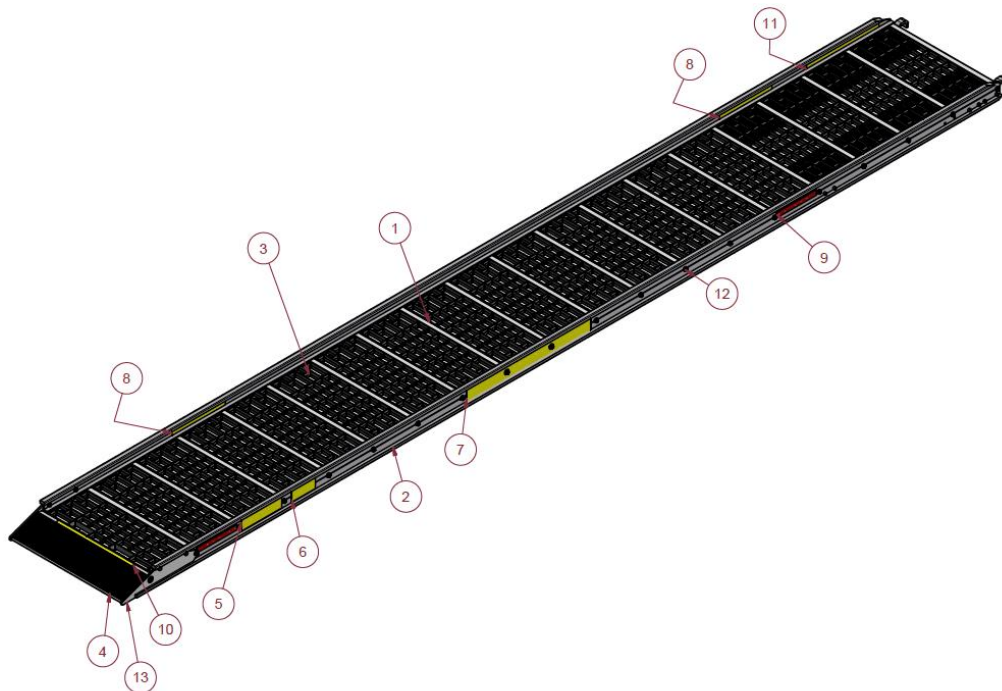

IMPORTANT: R•O•M also recommends that the ramp be used on a level surface. Do not allow ends of ramp to be dropped freely onto ground. Dropping the ramp can cause damage and possibly void any remaining warranty. Be sure to visit www.sftruckandtrailer.net for technical bulletins, installation instructions, maintenance videos, user videos and more.