


FDP 3136LR

PREVENTATIVE MAINTENANCE AND USAGE GUIDELINES

This Preventative Maintenance and Usage guideline is to inform users that regular inspection of your platform and stairs must be completed every three months and it's advisable that drivers inspect the platform and the stairs daily before use. Using a damaged platform could result in bodily injury. Use only Randall replacement parts and hardware for repairs.

Inspect the flat spring (1), make sure that the spring locks the platform when in a deployed position, check the screws (2) holding the spring to insure they are tight. Insure that the (3) ½" SHCS are present and tighten so they stop the platform from being pulled completely out of the tunnel. Very important: make sure, when deploying the stairs, that the latch (4) locks (on both sides) the stairs securely in place before the stairs are used. Visually inspect the welds. Make sure that the stairs tie bars (5) are fastened securely to the stair legs. Check the fasteners (6) on the sides of the tread panel.

Stressing and or excessive wear can be an indication of fatigue. Any components showing these signs should be replaced immediately. All labels shown in the diagram below must be legible. If not legible, be sure to replace as soon as possible: #03-25-1613, #03-26-1639, #03-26-1641, #03-26-1708, #03-26-2070 and #03-26-2071.

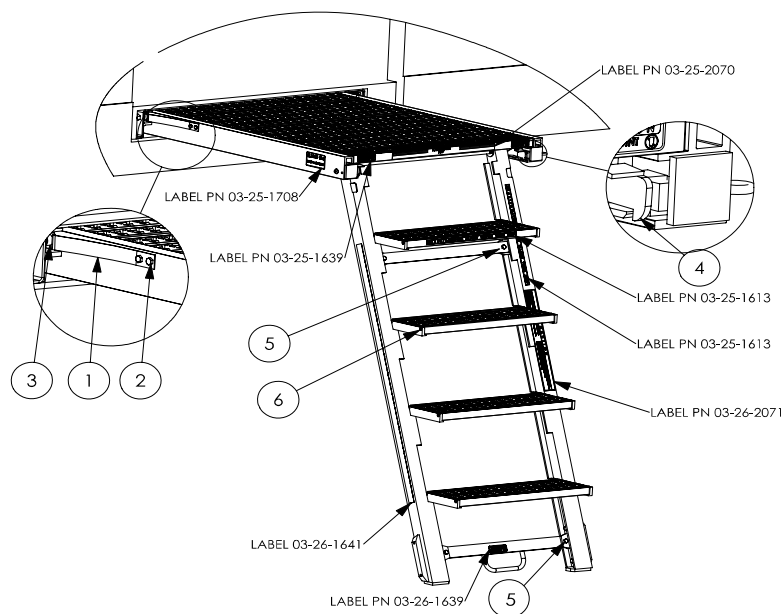

IMPORTANT: It is recommended that the platform stairs be used on a level surface. Be sure to regularly inspect your platform for loose fasteners, and repair or replace damaged parts. Any parts that are damaged or loose can cause serious injury. Improper usage of the platform can cause damage and possibly void any remaining warranty. Please contact your Territory Manager at 800-323-7424.