

RANDALL STRAIGHT WALKRAMP


PREVENTATIVE MAINTENANCE AND USAGE GUIDELINES

This preventative maintenance and usage guideline is to inform users that regular inspection of your ramps, enclosure, lift assist and receiving holes must be completed every three months and it's advisable that drivers inspect daily before use. Using a damaged ramp could result in bodily injury. Use only Randall replacement parts and hardware for repairs.

Inspect all 1/4"-20" (1) screws along the ramp side rails (2) to insure they are tight and also check all 1/4"-20 screws and nuts (3) inside the side rail to insure they are also tight Next check the 5/16"-18 screws and nuts (4) that secure the apron (5) and toe plate (6) also check the carriage bolts 3/8"-16 (7) on the apron (5) to insure that they are also tight. All screws MUST be torqued to the follow specification 1/4"-20 120-130 in/lbs, 5/16"-18 300-310 in/lbs and 3/8"-16 500-520 in/lbs DO NOT OVER TIGHTEN SCREWS!

Panel (8) should be fully intact with no cracks or bending. In the unlikely event that your panel surface becomes worn out, replace panel.

Inspect toe plate (6) and apron plate (5) for unusual wear and stress markings. Stressing and or excessive wear can be an indication of fatigue. Any components showing these signs should be replaced immediately. All labels shown in the diagram below must be legible. If not legible, be sure to replace as soon as possible: #03-25-1178 (9), #03-25-1171 (10), #03-25-1210 (11), #03-25-1177 (12) and (13) #03-25-1173.

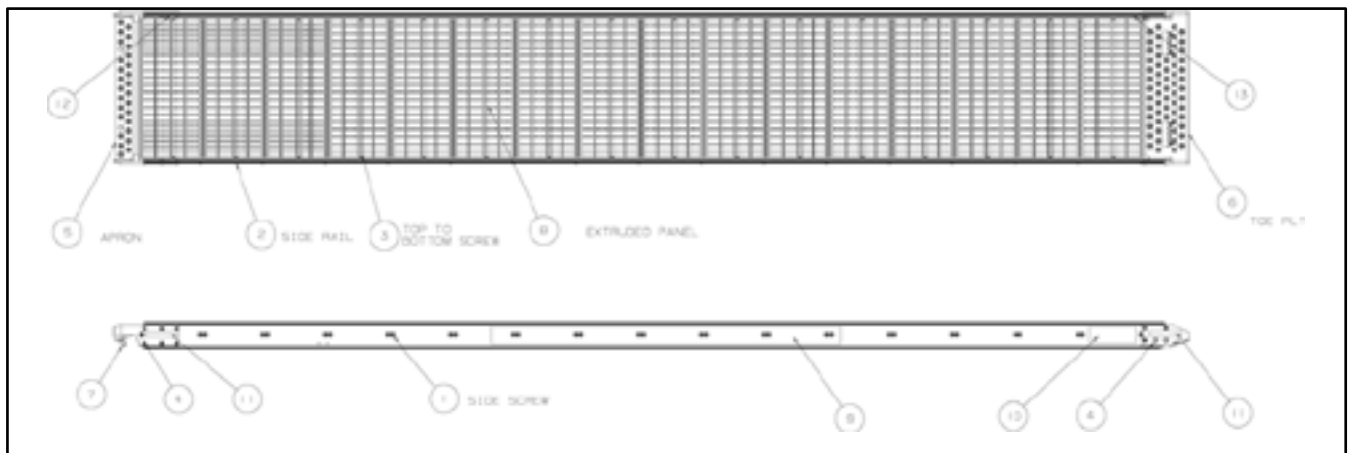

IMPORTANT: It is recommended that the ramp be used only on a level surface. Be sure to regularly inspect your ramp for loose fasteners, and repair or replace damaged parts. Any parts that are damaged or loose can cause serious injury. Improper usage of the ramp can cause damage and possibly void any remaining warranty. Please contact your Territory Manager at 800-323-7424.